

PART NUMBER

SSF-204-47/54



BEFORE YOU BEGIN

PRIMARY APPLICATIONS


- > Chevrolet Express 1500 4 X 2 (2007 - 2014)
- > Chevrolet Express 2500 4 X 2 (2007 - present)
- > Chevrolet Express 3500 4 X 2 (2007 - present)
- > Chevrolet Express 4500 4 X 2 (2009 - present)
- > Dodge Durango 4 X 2 & 4 X 4 (1998 - 2003)
- > GMC Savana 1500 4 X 2 (2007 - 2014)
- > GMC Savana 2500 4 X 2 (2007 - present)
- > GMC Savana 3500 4 X 2 (2007 - present)
- > GMC Savana 4500 4 X 2 (2009 - present)

PARTS LIST

Item	Part #	Description	QTY
A	511435	SumoSprings Black -47	2
	511444	SumoSprings Yellow -54	

TOOLS REQUIRED

- > Floor Jack
- > Jack Stands
- > Wheel Chocks
- > Large Flat Head Screwdriver
- > ¾" to 1" Thick Wood Board

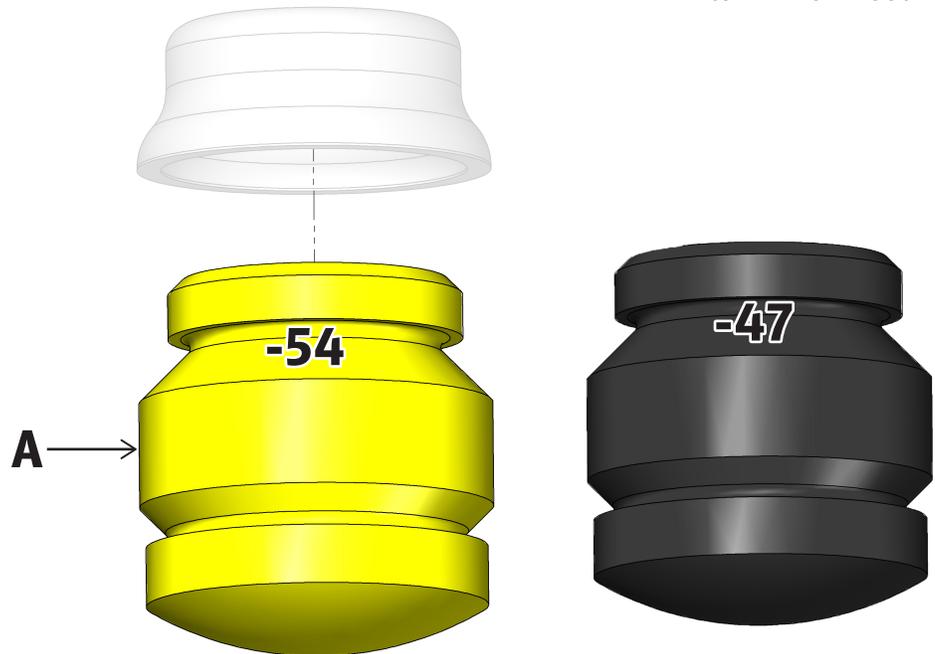

DRIVER SIDE (PASSENGER SIDE SIMILAR)

Part Number: SSF-204-47/54

Product Line: SUMOSPRINGS FRONT

Page 1

Questions or Concerns?

Scan here:



or visit:
superspringsinternational.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.01 | AUG 2023

PART NUMBER

SSF-204-47/54



INSTALLATION

1. Park vehicle on a hard, level surface. Engage emergency brake. Place chocks in front and behind rear wheels to prevent rolling. Observe all safety precautions and wear safety glasses.
2. Starting on the driver side, raise the front of vehicle allowing the axle to hang freely. Support the frame using safety jack stands.
3. Remove the factory bump stops by pulling/twisting out of the steel mounting cup. If needed, a large flat blade screwdriver can be used to pry them out.
4. Align SumoSprings [ITEM A] into the socket and place a ¾" to 1" thick board between contact area and the SumoSpring. Lower the jack allowing the weight of the vehicle to drive the SumoSpring into the socket. Jack vehicle up again and remove the board.
5. Repeat steps 3 through 4 on the passenger side of the vehicle.
6. Jack up vehicle, remove safety jack stands.
7. Carefully lower vehicle. Remove the chocks in front and back of the rear wheels.
8. Register the warranty for your SuperSprings International part. A warranty card can be found in the box your part came in.

Part Number: SSF-204-47/54

Product Line: SUMOSPRINGS FRONT

Page 2

Questions or Concerns?

Scan here:



or visit:
superspringsinternational.com

SAFETY NOTICE: We recommend installation be done by a professional or persons with sound mechanical knowledge.

WARNING: These instructions are a general guide for installation. SuperSprings International (SSI) assumes no liability for the actual installation process. Consumers and installers should apply common automotive safety practices when raising and working on any vehicle. **Do not put yourself in a position where, if the vehicle were to move unexpectedly, you may be injured.** SSI's products are designed to improve vehicle ride quality. Do not load any vehicle beyond the manufacturer's specifications.

Never exceed the manufacturer's Gross Vehicle Rating (GVWR) located on your vehicles identification tag.

BEFORE INSTALLATION: Ensure the vehicle is on a hard level surface, the parking brake is ON, with the ignition OFF, and place chocks in front of and behind the tires to prevent the vehicle from moving.

DURING AND/OR AFTER INSTALLATION: Ensure emergency brake cables are not touching the SSI products. Secure any cables out of the way with zip ties or by re-routing. Ensure all A/C lines, brake cables, and frame are clear of contact or interference.

REV. 2.01 | AUG 2023